




Position Cam Pass.Side

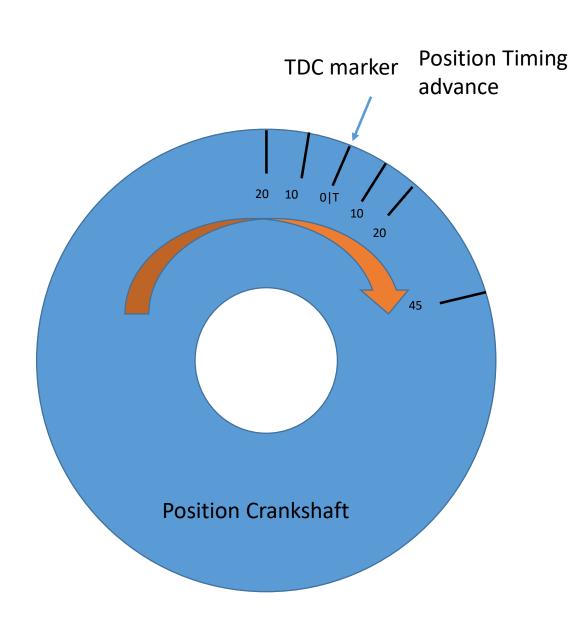

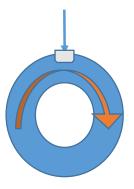



Position Cam Driver.Side

This indicates the TDC position on the flywheel when the #1 cylinder piston is in top position.

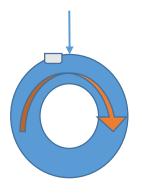

Position Cam Pass.Side

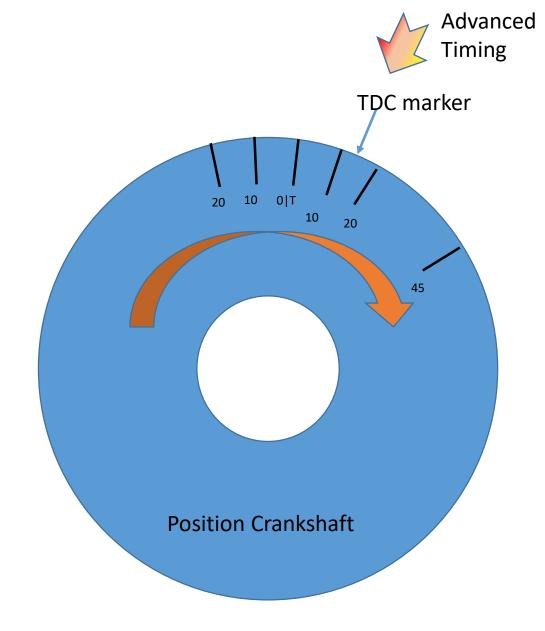

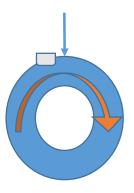

Position Cam Driver.Side

The red arrow indicates the position on the flywheel when the #1 cylinder sparkplug fires. So to be clear: it fires before the #1 reaches the TDC marker thus advance timing.

Advance timing could be up to 15 degrees. You can monitor this with a Stroboscope lamp