



Plug side top view

1	2	8
3	4	5
6	7	9

Connect 2, 4, 5 to bypass relay

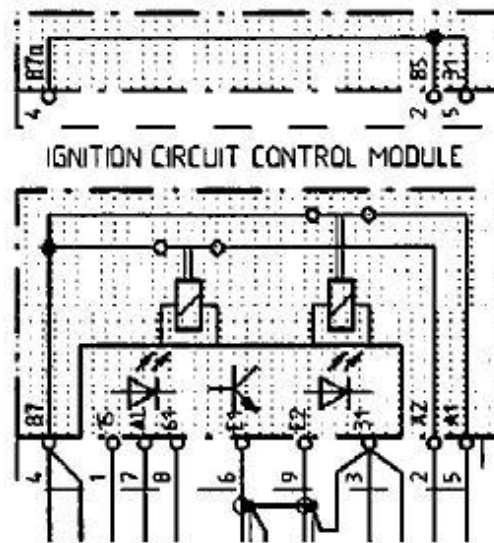

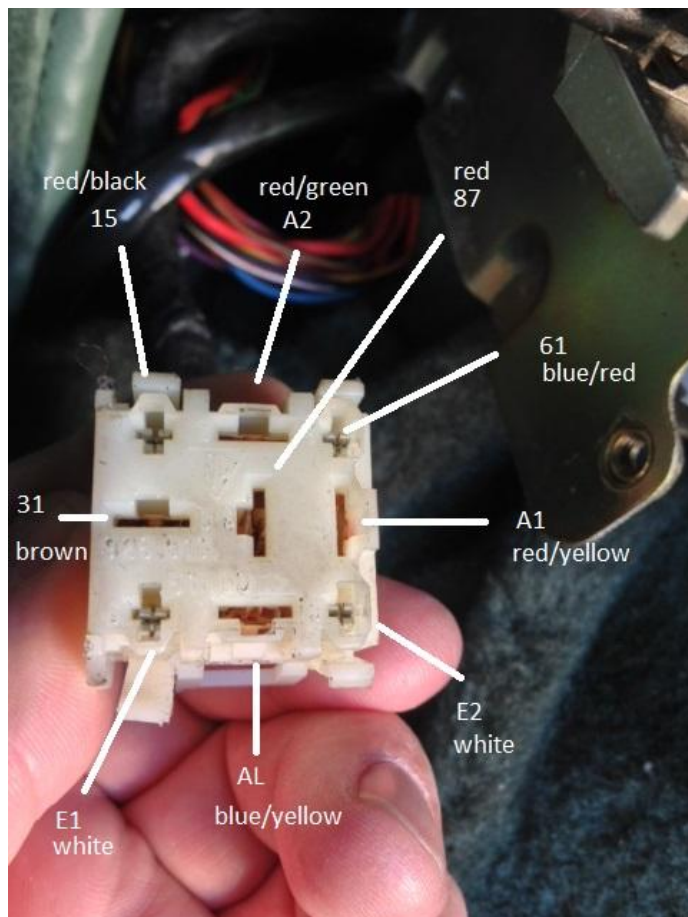

Basically connect on the connector: 87 with A1 and A2.

87 is 12v supply, A1 is power to injectors 1,4,6,7 and A2 provides power to injectors 2,3,5,8