

The easy way to check if your fuel pump actually is powered up when starting:

Measure 12v (instrument or test light) between chassis and V11 or U25.

At W15 you should see about 12v when the engine is not starting, and about 0v when the engine is starting (the LH grounds pin 85 of the relay which activates the fuel pump relay)

